


RELY ON EXCELLENCE

## DRO Rotary kiln sealing system

Special Products

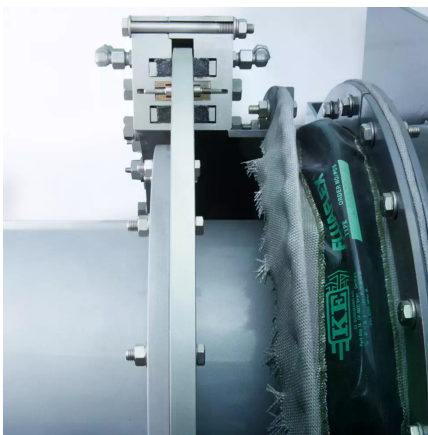

### Features

- Packing rings (self-adjusting) with permanent spring-action for optimal, continuous contact with the seal disc, optical wear indicator
- Can be pressurized with buffer gas
- Optional dust extraction at the expansion joint
- Optional flush fitting to remove dust deposits at the seal disc
- Double-acting seal rings for use with process-compatible barrier gas or to drain toxic or aggressive gas
- Cutting-edge materials, supports broad range of applications

### Functional description

The sealing system consists of a mounting flange welded on to the kiln shell. The two connected halves of the split case engage at the seal disk which is screw mounted to the flange. Depending on requirements, two or four packing rings are provided and a thrust ring presses them against the seal disk. A spring mechanism generates the contact force for the packing rings.

A specially designed expansion joint

### Advantages

- Reduced pollution emissions
- Clean residue combustion
- No partial temperature reduction below the residue combustion threshold due to air infiltration (no dioxin formation)
- Safe operation
- Significant reduction in primary energy consumption
- Long service life, low wear
- Predictable downtime (e.g. annual inspection)
- Available as retrofit on existing systems

### Operating range

Diameter:

d1 = 300... 8,000 mm (78" ... 315")

Pressure:

p = -50 ... +250 mbar (-0,72 ... 3,62 PSI)

Temperature (oven surface):

t = max. 300 °C (572 °F)

Rotational speed: ... 2.5 m/s (8.2 ft/s)

Radial movement capability: ... 35 mm (1,38")\*

Axial movement capability: ... 150 mm (5,91")\*

\* Greater values on request

### Materials

Metal parts: Steel S235JR (St 37-2 / 1.0037), CrNiMo steel (1.4571)

Other materials on request.

### Recommended applications


- Residue and waste incineration
- Cement production
- Calcination
- Reduction
- Process industry
- Petrochemical industry
- Chemical industry
- Pharmaceutical industry
- Toxic, hazardous, chemical media

## RELY ON EXCELLENCE

compensates for axial (thermal) expansion and change in the position of the kiln shell. A torque damper prevents rotation of the seal carrier assembly.

With the exception of the seal disc, the entire sealing system is free moving and runs on roller supports in the damper. The seal is able to follow any movement by the oven with the sealing function remaining intact.

The seal disc compensates for radial deflection of the rotary kiln (caused by ovality, etc.) by submerging to a greater or lesser extent into the seal housing.

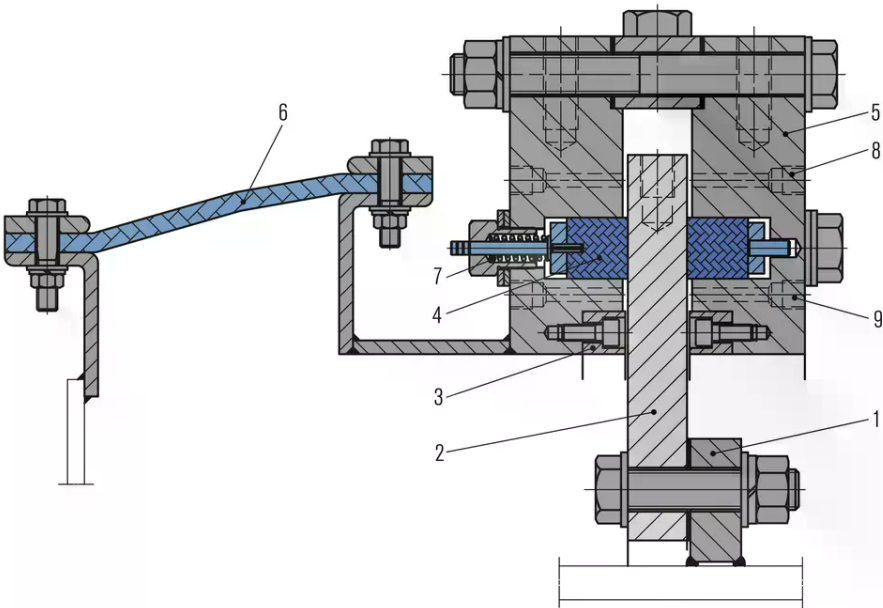


### DRO Single seal

Item	Designation
1	Mounting flange (kiln shell)
2	Seal disc (rotating)
3	Bronze seal face
4	Packing ring (static)
5	Housing
6	Expansion joint
7	Spring system
8	Thermal sensor fitting
9	Flush fitting


RELY ON EXCELLENCE

## Installation, details, options

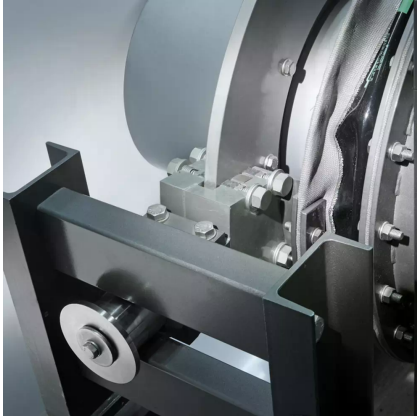

Torque damper with roller support

## Product variants

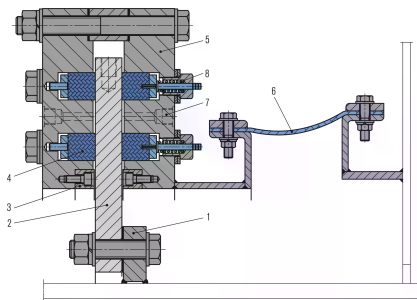

### DRO Double seal

#### Item Designation

- 1 Mounting flange (kiln shell)
- 2 Seal disc (rotating)
- 3 Bronze seal face
- 4 Packing ring (static)
- 5 Housing
- 6 Expansion joint
- 7 Flush fitting
- 8 Spring system